




SFRA45

Communications Manual

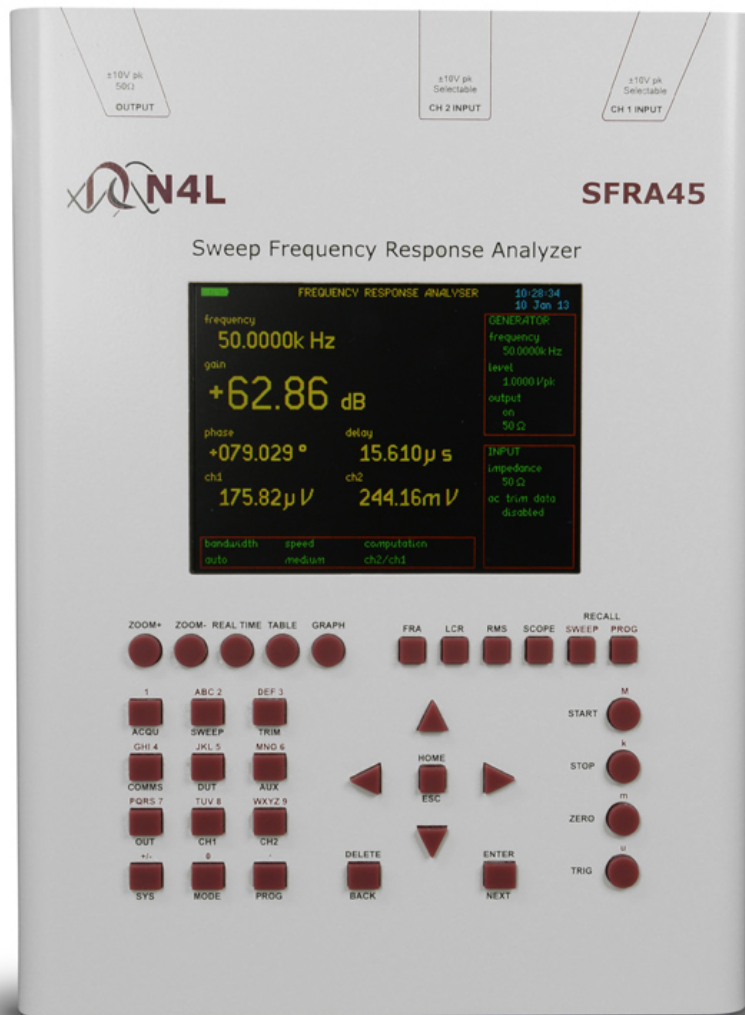

IMPORTANT SAFETY INSTRUCTIONS

This equipment is designed to comply with BSEN 61010-1 (Safety requirements for electrical equipment for measurement, control, and laboratory use) – observe the following precautions:

- Ensure that the supply voltage agrees with the rating of the instrument printed on the back panel **before** connecting the mains cord to the supply.
- This appliance **must** be earthed. Ensure that the instrument is powered from a properly grounded supply.
- The inputs must not be connected to signals greater than is indicated on the front panel.
- Keep the ventilation holes on the underneath and sides free from obstruction.
- Do not operate or store under conditions where condensation may occur or where conducting debris may enter the case.
- There are no user serviceable parts inside the instrument – do not attempt to open the instrument, refer service to the manufacturer or his appointed agent.

Note: Newtons4th Ltd. shall not be liable for any consequential damages, losses, costs or expenses arising from the use or misuse of this product however caused.

ABOUT THIS MANUAL

This manual gives details of the communication commands recognized by the SFRA45 series of instruments over RS232, USB, or LAN. For more general operating instructions for the instrument refer to the user manual.

Each command is listed alphabetically with details of any arguments and reply. A one line summary of each command is given in the appendix. Although most of the commands apply to all instruments in the range there are some commands that are specific to one instrument or another.

The information in this manual is believed to be accurate and complete but Newtons4th Ltd cannot accept any liability whatsoever for any consequential damage or losses arising from any errors, inaccuracies, or omissions.

Revision 2.65

This manual is copyright © 2008 - 2010 Newtons4th Ltd. and all rights are reserved. No part may be copied or reproduced in any form without prior written consent.

16th January 2012

CONTENTS

1	Using remote control	1-1
1.1	Standard event status register.....	1-3
1.2	Serial Poll status byte	1-4
1.3	RS232 connections.....	1-5
2	Communication commands	1
	*CLS	1
	*ESE	2
	*ESR?.....	3
	*IDN?.....	4
	*OPC?	5
	*RST	6
	*SRE	7
	*STB?.....	9
	*TRG	10
	*TST?.....	11
	*WAI	12
	ABORT	13
	ACRMS	14
	ACRMS?.....	15
	ACTRIM	16
	AMPLIT	17
	BEEP	18
	BLANKI	19
	CONFIG	20
	DAV?	22
	DAVER.....	23
	FILTER.....	25
	FRA	26
	FREQUE	28
	FSWEEP.....	29
	GAINPH	30
	HOLD	32
	INPUT.....	33
	KEYBOA	34
	LCR	35
	MARKER.....	37
	MODE	38
	OUTPUT	39
	PHCONV.....	40

SFRA45 communications manual

RANGE.....	42
RESOLU.....	43
RESULT.....	44
REZERO.....	45
SCALE.....	46
SCREEN?.....	47
SPEED.....	48
START.....	49
STATUS?.....	50
STOP.....	51
TCOMM?.....	52
TCOMM.....	53
TCON?.....	54
TCON.....	55
TFA.....	56
TFLUID.....	58
TID?.....	59
TID.....	60
TMANU?.....	61
TMANU.....	62
TOLTC.....	63
TREF?.....	64
TREF.....	65
TRES?.....	66
TRES.....	67
TSER?.....	68
TSER.....	69
TTEMP.....	70
TUNSHL.....	71
USER?.....	72
VERSIO?.....	73
WAVEFO.....	74
ZERO.....	75

1 Using remote control

The instrument is fitted with an RS232 serial communications port and USB port as standard, and may have a LAN interface fitted as an option. All the interfaces use the same ASCII protocol with the following end of line terminators:

	Rx expects	Tx sends
RS232	carriage return	carriage return
USB	(line feed ignored)	and line feed
LAN		

All the functions of the instrument can be programmed via any interface, and results read back. The port to be used is selected by the REMOTE menu.

The commands are not case sensitive and white space characters are ignored (e.g. tabs and spaces). Replies from the instrument are always upper case, delimited by commas, without spaces.

Only the first six characters of any command are important – any further characters will be ignored. For example, the command to set the generator frequency is FREQUE but the full word FREQUENCY may be sent as the redundant NCY at the end will be ignored.

Fields within a command are delimited by comma, multiple commands can be sent on one line delimited with a semi-colon. Eg.

AMPLIT,1.5;OUTPUT,ON

Mandatory commands specified in the IEEE488.2 protocol have been implemented, (e.g. *IDN?, *RST) and all commands that expect a reply are terminated with a question mark.

SFRA45 communications manual

The instrument maintains an error status byte consistent with the requirements of the IEEE488.2 protocol (called the standard event status register) that can be read by the mandatory command *ESR? (see section 5.1).

The instrument also maintains a status byte consistent with the requirements of the IEEE488.2 protocol, that can be read by the mandatory command *STB? (see section 5.2).

The keyboard is disabled when the instrument is set to "remote". Press HOME to return to "local" operation.

RS232 data format is: start bit, 8 data bits (no parity), 1 stop bit. Flow control is RTS/CTS (see section 5.2), baud rate is selectable via the REMOTE menu.

A summary of the available commands is given in the Appendix. Details of each command are given in the communication command section of the manual.

Commands are executed in sequence except for two special characters that are immediately obeyed:

- Control T (20) – reset interface (device clear)
- Control U (21) – warm restart

1.1 Standard event status register

PON		CME	EXE	DDE	QYE		OPC
-----	--	-----	-----	-----	-----	--	-----

- bit 0 OPC (operation complete)
cleared by most commands
set when data available or sweep complete
- bit 2 QYE (unterminated query error)
set if no message ready when data read
- bit 3 DDE (device dependent error)
set when the instrument has an error
- bit 4 EXE (execution error)
set when the command cannot be executed
- bit 5 CME (command interpretation error)
set when a command has not been recognised
- bit 7 PON (power on event)
set when power first applied or unit has reset

The bits in the standard event status register except for OPC are set by the relevant event and cleared by specific command (*ESR?, *CLS, *RST). OPC is also cleared by most commands that change any part of the configuration of the instrument (such as MODE or START).

1.2 Serial Poll status byte

		ESB	MAV			SDV	RDV
--	--	-----	-----	--	--	-----	-----

- bit 0 RDV (result data available)
set when results are available to be read as enabled by DAVER
- bit 1 SDV (sweep data available)
set when sweep results are available to be read as enabled by DAVER
- bit 2 not used
- bit 3 not used
- bit 4 MAV (message available)
set when a message reply is waiting to be read
- bit 5 ESB (standard event summary bit)
set if any bit in the standard event status register is set as well as the corresponding bit in the standard event status enable register (set by *ESE).

1.3 RS232 connections

The RS232 port on the instrument uses the same pinout as a standard 9 pin serial port on a PC or laptop (9-pin male 'D' type).

Pin	Function	Direction
1	DCD	in (+ weak pull up)
2	RX data	in
3	TX data	out
4	DTR	out
5	GND	
6	DSR	not used
7	RTS	out
8	CTS	in
9	RI	not used

The instrument will only transmit when CTS (pin 8) is asserted, and can only receive if DCD (pin 1) is asserted. The instrument constantly asserts (+12V) DTR (pin 4) so this pin can be connected to any unwanted modem control inputs to force operation without handshaking. The instrument has a weak pull up on pin 1 as many null modem cables leave it open circuit. In electrically noisy environments, this pin should be driven or connected to pin 4.

To connect the instrument to a PC, use a 9 pin female to 9 pin female null modem cable:

1 & 6	-	4
2	-	3
3	-	2
4	-	1 & 6
5	-	5
7	-	8
8	-	7

2 Communication commands

***CLS**

***CLS**

Function: Clear status

Description: Clears the *standard event status register*.

Format: *CLS

Arguments: none

Reply: none

Example: *CLS
*ESR?
0

Notes:

***ESE**

***ESE**

Function: Set standard event status enable register.

Description: Enable which bits of the *standard event status register* set the ESB bit in the serial poll status byte..

Format: *ESE, value

Arguments: decimal equivalent of bits in standard event status enable register

Reply: can be read by *ESE?

Example: *ESE, 60

Notes: The following bits in the standard event status enable register have been implemented:

- bit 0 OPC (operation complete)
- bit 2 QYE (unterminated query error)
- bit 3 DDE (device dependent error)
- bit 4 EXE (execution error)
- bit 5 CME (command interpretation error)
- bit 7 PON (power on event)

For example, *ESE, 60 enables all the error bits so that the ESB bit in the serial poll status byte is set in the event of any error.

***ESR?**

***ESR?**

Function: Standard event status register query

Description: Returns the contents of the *standard event status register* and clears it.

Format: *ESR?

Arguments: none

Reply: decimal equivalent of bits in standard event status register

Example: *ESR?
33

Notes: The following bits in the standard event status register have been implemented:

- bit 0 OPC (operation complete)
- bit 2 QYE (unterminated query error)
- bit 3 DDE (device dependent error)
- bit 4 EXE (execution error)
- bit 5 CME (command interpretation error)
- bit 7 PON (power on event)

For example, if a command is sent incorrectly and is not recognised, the CME bit will be set and the value of 33 will be returned.

***IDN?**

***IDN?**

Function: Identify query

Description: Returns a standard format identification string.

Format: *IDN?

Arguments: none

Reply: An ASCII string in the IEEE488.2 format:
manufacturer,model,serial no,version

Example: *IDN?
NEWTONS4TH,PSIMETRIQ,01234,1.00

Notes:

***OPC?**

***OPC?**

Function: Test for operation complete

Description: Returns 1 if previous operation is completed, 0 if not.

Format: *OPC?

Arguments: none

Reply: 0 or 1

Example: START
*OPC?
0
*OPC?
0
*OPC?
1

Notes: *OPC? can be used to indicate when data is available or when a frequency sweep has completed.

***RST**

***RST**

Function: Reset

Description: Resets the instrument to the default state and clears the *standard event status register*.

Format: *RST

Arguments: none

Reply: none

Example: *RST

Notes: The *RST command loads the default configuration. This is the same as loading the default configuration via the PROGRAM menu.

Any preceding setup commands will be overwritten.

*RST should be followed by an end of line not a message separator. It may be helpful to follow it with a short pause to allow the new configuration to become active before sending further commands.

***SRE**

***SRE**

Function: Set service request enable register.

Description: Enable which bits of the *status byte register* initiate a service request.

Format: *SRE, value

Arguments: decimal equivalent of bits in status byte register

Reply: can be read by *SRE?

Example: *SRE, 1
generate a service request when data available.

Notes:

***SRE?**

***SRE?**

Function: Read service request enable register.

Description: Read back the present setting of the service request enable register.

Format: *SRE?

Arguments:

Reply: decimal equivalent of bits in status byte register that would generate a service request.

Example: *SRE?
1

Notes:

***STB?**

***STB?**

Function: Read serial poll status byte

Description: Returns the decimal value of the serial poll status byte.

Format: *STB?

Arguments: none

Reply: decimal value of the serial poll status byte

Example: *STB?
1

Notes: The following bits in the serial poll status register have been implemented:

- bit 0 RDV (results data available)
- bit 1 SDV (sweep data available)
- bit 3 ALA (alarm active)
- bit 4 MAV (message available)
- bit 5 ESB (standard event summary bit)

***TRG**

***TRG**

Function: Trigger

Description: Initiates a new measurement, resets the ranging and filtering.

Format: *TRG

Arguments: none

Reply: none

Example: MODE, VRMS
*TRG
VRMS?

Notes:

***TST?**

***TST?**

Function: Self test query

Description: Returns the results of self test

Format: *TST?

Arguments: none

Reply: single integer
bit 0 – set if uncalibrated
bit 1 – set if error with analogue zero
> 15 – major system error

Example: *TST?
0

Notes:

***WAI**

***WAI**

Function: Wait for operation complete

Description: Suspends communication until the previous operation has completed

Format: *WAI

Arguments: none

Reply: none

Example: GAINPH
START
*WAI
GAINPH,SWEEP?

Notes: In the example, the query command GAINPH,SWEEP? can be sent immediately after the *WAI command and the sweep data will be returned as soon as the sweep has completed.

ABORT

ABORT

Function: Abort sweep
Description: Abort an active sweep.
Format: ABORT
Arguments: none
Reply: none
Example: FSWEEP,1000,1E5,5E5
START
ABORT

Notes:

ACRMS

ACRMS

Function: Set up rms voltmeter.
Description: Set mode to rms voltmeter.
Format: ACRMS
Arguments: none
Reply: none
Examples: ACRMS
Notes: This has the same effect as MODE,ACRMS

ACRMS?

VRMS?

Function: Read true rms voltmeter results

Description: Reads back latest voltmeter results.
Waits for next unread data if necessary.
Clears new data available status bit.

Format: ACRMS?

Arguments:

Reply: 10 data values separated by commas
Ch1 Vrms, Ch2 Vrms, Ch1 Vdbm,
Ch2 Vdbm, Ch1 Pk, Ch2 Pk, Ch1 CF,
Ch2 CF, Ch1 Surge ,Ch2 Surge

Example: ACRMS?

Notes:

ACTRIM

ACTRIM

Function: Set ac control parameters

Description: Sets the specified signal level, tolerance and input channel. for the ac control (amplitude compression).

Format: *ACTRIM,channel,level,tolerance*

Arguments: channel:
 DISABL
 CH1
 CH2
 level:
 required ac level in V or A or dBm
 tolerance:
 required accuracy in percent

Reply: none

Example: ACTRIM,CH1,1.0,5 (1.0V, 5%)

Notes: The level should be set in dBm if dBm mode is selected

It is not necessary to send all the arguments but those that are sent must be in the correct sequence.

AMPLIT

AMPLIT

Function: Set output amplitude

Description: Sets the output amplitude in Volts or dBm for the generator.

Format: *AMPLIT, amplitude*

Arguments: peak amplitude in Volts or amplitude in dBm

Reply: none

Example: `AMPLIT,0.5` (set peak amplitude to 0.5V)

Notes: The amplitude may be Volts or dBm.

BEEP

BEEP

Function: Sound the buzzer
Description: Makes a "beep" from the instrument.
Format: BEEP
Arguments: none
Reply: none
Example: BEEP
Notes:

BLANKI

BLANKI

Function: Select blanking
Description: Enable or disable low value blanking.
Format: *BLANKI, value, threshold*
Arguments: value:
 ON
 OFF
 threshold:
 threshold in appropriate units
Reply: none
Example: BLANKI,OFF
 BLANKI,ON,-35
Notes:

CONFIG

CONFIG

Function: Direct access of configuration parameters

Description: Sets configuration parameter for which there may not be a direct command.

Format: *CONFIG,index,data*

Arguments: index is the number of the parameter
data is the data for that parameter

Reply: none

Example: CONFIG,6,1 (set phase convention)

Notes: The list of configurable parameters is given in the appendix.
CONFIG goes through the same limit checking as when entering data from the menus.

CONFIG?

CONFIG?

Function: Configurable parameter query

Description: Reads the present value of a single parameter.

Format: *CONFIG,index?*
or: *CONFIG?index*

Arguments: index is the parameter number

Reply: Value of parameter, real or integer as appropriate.

Example: *CONFIG,6?* (read phase convention)
0
CONFIG,6,1
CONFIG,6?
1

Notes: The list of configurable parameters is given in the appendix.

DAV?

DAV?

Function: Data available query

Description: Returns data availability status.

Format: DAV?

Arguments: none

Reply: Decimal equivalent of data available bits:
 bit0 new data available
 bit1 data available
 bit2 new full sweep data available
 bit3 sweep data available
 bit4 streaming data available
 bit5 more streaming data to come
 bit6 integration data available
 bit7 datalog data available

Example: START (trigger sweep)
 DAV?
 0
 DAV?
 11 (first data available)
 DAV?
 11
 DAV?
 11
 DAV?
 15 (full sweep data available)

Notes: DAV? does not modify the status bits.

DAVER

DAVER

Function: Set data available enable register

Description: Sets bits in the data available enable register to control which status bits set the data available bits in the status byte.

Format: DAVER,value

Arguments: decimal equivalent of data available bits
 bit0 set bit 0 of status byte when new data available
 bit1 set bit 0 of status byte when data available
 bit2 set bit 1 of status byte when new full sweep data available
 bit3 set bit 1 of status byte when sweep data available
 bit4 set bit 2 of status byte when streaming data available
 bit5 set bit 2 of status byte if more streaming data is to come

Reply: none

Example: DAVER, 4
 set bit 1 in status byte only when full sweep data is ready

Notes: default value is 6:
 bit 0 of status byte is set whenever data is available
 bit 1 of status byte is set when full sweep data is available.

DAVER?

DAVER?

Function: Read data available enable register

Description: Read back present setting of the data available enable register, which controls the status bits that set the data available bits in the status byte.

Format: DAVER?

Arguments: none

Reply: decimal equivalent of bits

Example: DAVER?
4

Notes:

FILTER

FILTER

Function: Select the filtering

Description: Sets the filter time constant and dynamic response.

Format: *FILTER, type, dynamics*

Arguments: type:
 NONE
 NORMAL
 SLOW
 dynamics:
 AUTO
 FIXED

Reply: none

Example: FILTER,NORMAL,FIXED
 FILTER,NONE

Notes: It is not necessary to send both parameters if it is only required to set the type. Both arguments must be sent to set the dynamics.

FRA

FRA

Function: Set frequency response analyser mode.

Description: Set frequency response analyser mode.

Format: FRA

Arguments:

Reply: none

Example: FRA

Notes: This command has the same effect as MODE,GAINPH.
FRA, GAINPH, TFA are aliases for the same command.

FRA?

FRA?

Function: frequency response analyser query

Description: Read frequency response analyser results.
Sets frequency response analyser mode if not already set.
Waits for next unread data if necessary.
Clears new data available bit read by DAV?

Format: FRA?
or: FRA?SWEEP
or: FRA,SWEEP?

Arguments: none, or SWEEP

Reply: 6 data values separated by commas
freq, mag1,mag2,db,phase,gain
one line per result for sweep data

Example: OUTPUT,ON
FRA
FSWEEP,20,10,20E3
START
DAV?
3
DAV?
15
FRA?SWEEP
data returned

Notes: FRA? waits for next unread data.
FRA?SWEEP does not wait for new data – data can be read multiple times.
FRA, GAINPH, TFA are aliases for the same command

FREQUE

FREQUE

Function: Set the output frequency

Description: Sets the generator output frequency in Hz.

Format: `FREQUE, frequency`

Arguments: frequency in Hz

Reply: none

Example: `FREQUE,5e4` (set frequency to 50kHz)

Notes:

FSWEEP

FSWEEP

Function: Set the frequency sweep parameters

Description: Sets the start frequency in Hz, the end frequency, the number of steps and log/linear for the selected function.

Format: *FSWEEP, steps, start, end, type*

Arguments:

- steps:
 - number of steps
- start:
 - start frequency in Hz
- end:
 - end frequency in Hz
- type:
 - LOGARI
 - LINEAR

Reply: none

Example:


```
MODE,GAINPH
FSWEEP,50,1000,1e6
```

 (set 50 steps between 1kHz and 1MHz)

Notes:

It is not necessary to send all the arguments, but if they must be in the specified order.

The same command is used for all the functions – the data is applied to whichever function has been selected if valid (such as gain/phase analyser). If the selected mode is not valid (such as rms), then the command is ignored and an execution error is flagged in the standard event status register, sesr.

GAINPH

GAINPH

Function: Set gain/phase analyser mode.

Description: Set gain/phase analyser mode.

Format: GAINPH

Arguments:

Reply: none

Example: GAINPH

Notes: This command has the same effect as MODE,GAINPH.
FRA, GAINPH, TFA are aliases for the same command.

GAINPH?

GAINPH?

Function: Gain/phase query

Description: Read gain/phase analyser results.
Sets gain/phase analyser mode if not already set.
Waits for next unread data if necessary .
Clears new data available bit read by DAV?

Format: GAINPH?
or: GAINPH?SWEEP
or: GAINPH,SWEEP?

Arguments: none, or SWEEP

Reply: 6 data values separated by commas
freq, mag1, mag2, db, phase, gain
one line per result for sweep data

Example: OUTPUT,ON
GAINPH
FSWEEP,20,10,20E3
START
DAV?
3
DAV?
15
GAINPH?SWEEP
data returned

Notes: GAINPH? waits for next unread data.
GAINPH?SWEEP does not wait for new data – data can be read multiple times.

HOLD

HOLD

Function: Set/clear HOLD mode

Description: HOLD mode stops the instrument from updating the measured values

Format: HOLD, *value*

Arguments: value:
 ON
 OFF

Reply: none

Example: HOLD,ON

Notes:

INPUT

INPUT

Function: Set input mode

Description: Selects the input type of the instrument

Format: *INPUT, type, impedance*

Arguments: type:
 LOLEVEL
 impedance:
 500HMS
 HIIMPEDANCE

Reply: none

Example: INPUT, LOLEVE, HIIMPE

Notes: The impedance value is only valid for the low level input

KEYBOA

KEYBOA

Function: Disable front panel keyboard.

Description: The front panel keyboard can be disabled to prevent accidental operation.

Format: KEYBOARD, *value*

Arguments: value:
 ENABLE
 DISABLE

Reply: none

Example: KEYBOARD,DISABLE

Notes: The keyboard can be re-enabled from the front panel only by pressing the HOME key.

LCR

LCR

Function: Set LCR meter mode.
Description: Set LCR mode and model.
Format: LCR,*model*
Arguments: model:
 IMPEDANCE
 SERIES
 PARALLEL
Reply: none
Example: LCR, IMPEDA
Notes:

LCR?

LCR?

Function: LCR meter query

Description: Read LCR meter results.
Sets LCR meter mode if not already set.
Waits for next unread data if necessary.
Clears new data available bit read by DAV?

Format: LCR?
or: LCR?SWEEP
or: LCR,SWEEP?

Arguments: none, or SWEEP

Reply: 5 data values separated by commas:
frequency, resistance, reactance,
impedance, phase
one line per result for sweep data

Example: OUTPUT,LOLEVE
LCR?
data returned

Notes: LCR? waits for next unread data.
LCR?SWEEP does not wait for new data –
data can be read multiple times.

MARKER

MARKER

Function: Set frequency marker

Description: Enable or disable frequency marker.

Format: *MARKER, value, frequency*

Arguments: value:
Off
Single
Dual
frequency:
marker frequency in Hz

Reply: none

Example: *MARKER,OFF*
MARKER,Single,25e3

Notes: It is not necessary to send the frequency when enabling the marker if it has already been set.

MODE

MODE

Function: Set mode

Description: Sets the fundamental operating mode of the instrument.

Format: *MODE, type*

Arguments: type:
 ACRMS
 LCR
 FRA
 SCOPE

Reply: none

Example: MODE,LCR

Notes: MODE sets the measurement mode of the instrument

OUTPUT

OUTPUT

Function: Set output

Description: Turns the output on or off, or sets the level mode to dBm or voltage. Also specifies action at the end of a sweep

Format: OUTPUT, *type*

Arguments: command:
 OFF
 ON

Reply: none

Example: OUTPUT,ON

Notes: For safety, the output defaults to off and must be turned on explicitly.

PHCONV

PHCONV

Function: Set phase convention

Description: Set phase convention

Format: PHCONV, *convention*

Arguments: convention:
180: -180 to +180
-360: 0 to -360
+360: 0 to +360

Reply: none

Example: PHCONV, -360

Notes:

Notes: Number 0 represents factory default, which can only be recalled.

PROGRA?

PROGRA?

Function: Identify current program.

Description: Reads the name of the last program to be loaded or recalled.

Format: PROGRA?

Arguments: none

Reply: text string

Example: PROGRA?
factory default

Notes:

RANGE

RANGE

Function: Set channel ranging.

Description: Select minimum range and range control for a given input channel.

Format: *RANGE,channel,ranging,range*

Arguments: channel:
 CH1
 CH2
 ranging:
 AUTO
 UPAUTO
 MANUAL
 range:
 nominal range value

Reply: none

Example: RANGE,CH2,MANUAL,3V

Notes:

RESOLU

RESOLU

Function: Set the data resolution

Description: Data is returned in scientific format with exponent and mantissa. The resolution of the mantissa may be selected to be 5 digit (NORMAL) or 6 digit (HIGH).

Format: RESOLU,*format*

Arguments: format:
 NORMAL (5 digit mantissa)
 HIGH (6 digit mantissa)
 BINARY (raw binary format)

Reply: none

Example: RESOLU,HIGH

Notes: The resolution only changes the real number replies.
 Data format for NORMAL is:
 [-]1.2345E[-]00
 Data format for HIGH is:
 [-]1.23456E[-]00
 The signs of the mantissa and exponent, shown as [-] in the above examples, are only sent if they are negative.
 Data format for BINARY is a proprietary floating point format which returns raw data in a minimum number of data bytes.

RESULT

RESULT

Function: Access non volatile results stores.
Description: Recall, store or delete non-volatile results store.
Format: RESULT, *function*, *number*
Arguments: function:
 RECALL
 STORE
 DELETE
 number
 1-999
Reply: none
Example: RESULT, RECALL, 13
Notes:

REZERO

REZERO

Function: Rezero front end

Description: Request the DSP to re-compensate for dc offset and compute a new autozero

Format: REZERO

Arguments: none

Reply: none

Example: REZERO

Notes:

SCALE

SCALE

Function: Set channel scale factor.

Description: Set a multiplying scale factor for a given input channel.

Format: *SCALE,channel,factor*

Arguments: channel:
 CH1
 CH2
 factor:
 multiplying scale factor

Reply: none

Example: SCALE,CH2,10

Notes:

SCREEN?

SCREEN?

Function: Read the screen data
Description: Returns a bit map of screen pixel display in ascii and hex format
Format: SCREEN?
Arguments: none
Reply: Multiple data bit values
Example: SCREEN?
data returned

Notes: SCREEN? response:

ASCII coded Hex
(2 characters for each byte)
240 lines of 40 bytes (each line represents one line of the display) preceded by #H
Each byte represents 8 dots where the lsb is the leftmost dot of the display
The bit is set for on and cleared for off

SPEED

SPEED

Function: Sets the measurement speed

Description: Sets the minimum window size for the measurement (FRA and LCR modes).

Format: *SPEED,value*
SPEED,WINDOW,time

Arguments: value:
FAST
MEDIUM
SLOW
VSLOW
VFAST
WINDOW
time:
window time in seconds

Reply: none

Example: SPEED,SLOW

Notes:

START

START

Function: Start sweep

Description: Initiate sweep in those functions that have a sweep or resets filtering in others.

Format: START

Arguments: none

Reply: none

Example: FSWEEP,100,50000,75000
START

Notes:

STATUS?

STATUS?

Function: Read back channel ranging status.

Description: Read back condition of selected channel:
range number (1-16)
range text
overflow/underflow status

Format: *STATUS,channel?*
or: *STATUS?channel*

Arguments: channel:
CH1
CH2

Reply: range number,range text,over/under/ok
1-16
range as per RANGE command
OVER if overflow
LOW if underflow
OK if in range

Example: STATUS,CH1?
6,3V,OK

Notes:

STOP

STOP

Function: Stop sweep
Description: Stop an active sweep.
Format: STOP
Arguments: none
Reply: none
Example: FSWEEP,100,50000,75000
START
STOP

Notes:

TCOMM?

TCOMM?

Function: Read the Comments relating to transformer

Description: Comments

Format: TCOMM?

Arguments: none

Reply: Transformer Reference terminal terminated by CR

Example: TCOMM?
 abcdefg

Notes:

TCOMM

TCOMM

Function: Transformer Comments
Description: Comments to state the condition of the DUT during measurement
Format: TCOMM,*Comments*
Arguments: *Comments*
Reply: none
Example: TCOMM,abcd
Notes: Max 20 Characters

TCON?

TCON?

Function: Read the Transformer Connected
Terminals

Description: Transformed Connected Terminals

Format: TCON?

Arguments: none

Reply: Transformer ID terminated by CR

Example: TCON?
A1-B1-C1

Notes:

TCON

TCON

Function: Set Transformer Connected Terminal

Description: Sets the transformer Connected Terminal, the identification of all test objects terminals that were connected together during the measurement

Format: TCON, *ConnTerminal*

Arguments: *ConnTerminal*

Reply: none

Example: TCON,a1-b1-c1

Notes:

TFA

TFA

Function: Set transfer function analyser mode.
Description: Set transfer function analyser mode.
Format: TFA
Arguments:
Reply: none
Example: TFA
Notes: This command has the same effect as
MODE,GAINPH.
FRA, GAINPH, TFA are aliases for the
same command.

TFA?

TFA?

Function: transfer function analyser query

Description: Read transfer function analyser results.
Sets transfer function analyser mode if not already set.
Waits for next unread data if necessary.
Clears new data available bit read by DAV?

Format: TFA?
or: TFA?SWEEP
or: TFA,SWEEP?

Arguments: none, or SWEEP

Reply: 6 data values separated by commas
freq, mag1, mag2, db, phase, gain
one line per result for sweep data

Example: OUTPUT,ON
TFA
FSWEEP,20,10,20E3
START
DAV?
3
DAV?
15
TFA?SWEEP
data returned

Notes: TFA? waits for next unread data.
TFA?SWEEP does not wait for new data – data can be read multiple times.
FRA, GAINPH, TFA are aliases for the same command

TFLUID

TFLUID

Function: Set transformer fluid filled

Description: Sets the transformer fluid filled ,Yes or NOPE depending on whether the test object was fully filled with the normal operating fluid during measurement

Format: TFLUID, *type*

Arguments: command:
 YES
 NOPE

Reply: none

Example: TFLUID,YES

Notes:

TID?

TID?

Function: Read the Transformer ID
Description: Returns the transformer ID
Format: TID?
Arguments: none
Reply: Transformer ID terminated by CR
Example: TID?
 0123456789
Notes:

TID

TID

Function: Set Transformer ID
Description: Sets the transformer ID.
Format: TID, *ID*
Arguments: ID
Reply: none
Example: TID,234 (set transformer ID to 234)
Notes:

TMANU?

TMANU?

Function: Read the Transformer Manufacturer
Description: Returns the transformer Manufacturer
Format: TMANU?
Arguments: none
Reply: Transformer Manufacturer ID terminated
by CR
Example: TMANU?
Transformer Sols
Notes:

TMANU

TMANU

Function: Set Transformer Manufacturer ID
Description: Sets the transformer manufacturer ID.
Format: TMANU,*manID*
Arguments: manID
Reply: none
Example: TMANU,ABCDEF (set transformer manufacturer ID to ABCDEF)
Notes:

TOLTC

TOLTC

Function: Transformer OLTC

Description: Sets the transformer OLTC tap position, the tap position indicated on the test object during measurement

Format: TCOMM,*OLTC*

Arguments: *Comments*

Reply: none

Example: TOLTC,21

Notes:

TREF?

TREF?

Function: Read the Transformer Reference Terminal

Description: Returns the transformer Reference Terminal, the identification of the test object terminal to which the reference and the source lead was connected

Format: TREF?

Arguments: none

Reply: Transformer Reference terminal terminated by CR

Example: TREF?
 abcdefg

Notes:

TREF

TREF

Function: Set Transformer Reference Terminal

Description: Sets the transformer Reference Terminal, the identification of the test object terminal to which the reference and the source lead was connected

Format: TREF,*RefTerm*

Arguments: Refterm

Reply: none

Example: TREF,abcd

Notes:

TRES?

TRES?

Function: Read the Transformer Response Terminal

Description: Returns the transformer Response Terminal, the identification of the test object terminal to which the response lead was connected

Format: TRES?

Arguments: none

Reply: Transformer Response terminal terminated by CR

Example: TRES?
 abcdefg

Notes:

TRES

TRES

Function: Set Transformer Response Terminal

Description: Sets the transformer Response Terminal, the identification of the test object terminal to which the response lead was connected

Format: TRES, *ResTerm*

Arguments: Restern

Reply: none

Example: TRES,abcd

Notes:

TSER?

TSER?

Function: Read the Transformer Serial Number
Description: Returns the transformer Serial Number
Format: TSER?
Arguments: none
Reply: Transformer Serial Number terminated by CR
Example: TSER?
 0123456789
Notes:

TSER

TSER

Function: Set Transformer Serial Number
Description: Sets the transformer Serial Number.
Format: *TSER, ID*
Arguments: ID
Reply: none
Example: *TSER,234* (set transformer serial ID to 234)
Notes:

TTEMP

TTEMP

Function: Set the temperature of the test object dielectric during measurement

Description: Set the temperature of the test object dielectric during measurement

Format: TTEMP, *temperature*

Arguments: Temperature in degree Celsius

Reply: none

Example: TTEMP,23.2 (set temperature to 23.2°C)

Notes:

TUNSHL

TUNSHL

Function: Set the length of unshielded Connection unit of the transformer

Description: Set the length of unshielded Connection unit of the transformer in mm

Format: TUNSHL,*length*

Arguments: length in mm

Reply: none

Example: TUNSHL,22 (set length to 22mm)

Notes:

USER?

USER?

Function: Read the user data
Description: Returns up to 3 lines of user data
Format: USER?
Arguments: none
Reply: 3 lines of ASCII terminated by CR
Example: USER?
 Newtons4th Ltd
 R&D department
 SFRA45 #4

Notes:

VERSIO?

VERSIO?

Function: Read the instrument code versions.

Description: Returns an ASCII string with the details of the various parts of the instrument firmware.

Format: VERSIO?

Arguments: none

Reply: date code, type, cpu, dsp, fpga, boot

Examples: VERSION?
PQ3504,1,2.01,2.20,2.20,2.02

Notes: This data can be displayed on the screen by pressing SYSTEM then BACK

WAVEFO

WAVEFO

Function: Set the output waveform

Description: Selects the output waveform for the signal generator.

Format: WAVEFO, *type*

Arguments: type:
 SINEWA (sine wave)
 TRIANG (triangle wave)
 SQUARE (square wave)
 NOISE (white noise)
 RAMP (ramp)

Reply: None

Example: FREQUE,500
 WAVEFO,TRIANG (triangle wave)
 OUTPUT,ON

Notes:

ZERO

ZERO

Function: Apply or remove the zero

Description: Applies or removes a zero function depending on the measurement mode (same as pressing ZERO key).
Performs lead compensation in LCR mode.

Format: ZERO
ZERO,DELETE
ZERO,DB,*offset*
ZERO,PHASE,*offset*

LCR compensation ZERO,SINGLE
ZERO,SWEEP,*steps,start,finish*
ZERO,OPEN
ZERO,SHORT
ZERO,STORE
ZERO,RECALL

Arguments: offset:
offset value
steps:
LCR sweep compensation steps
start:
LCR compensation start frequency
stop:
LCR compensation stop frequency

Reply: none

Example: ZERO,SWEEP,100,1e3,1e6
ZERO,OPEN
performs open circuit compensation

Notes:

Appendices

COMMAND SUMMARY

CONFIGURABLE PARAMETERS

SFRA45 communications manual

command format	reply format
*CLS	
*ESE,value	
*ESE?	single integer data value
*ESR?	single integer data value
*IDN?	company,product,serial no,version
*OPC?	0 or 1
*RST	
*SRE,value	single integer data value
*SRE?	
*STB?	single integer data value
*TRG	
*TST?	single integer data value
*WAI	
ABORT	
ACRMS?	10 data values (RMS results)
ACRMS	
ACTRIM,channel, level, tol	
AMPLIT,amplitude	
BEEP	
BLANKI,on/off,threshold	
CONFIG,parameter,data	
CONFIG,parameter?	single integer or real data value
DAV?	single integer data value
DAVER,value	
DAVER?	single integer data value
FILTER,type,dynamics	
FRA	
FRA?	freq,gain,phase,dB,mag1,mag2
FRA,SWEEP?	n lines of FRA? data
FREQUE,frequency	
FSWEEP,steps,start,end,log	
GAINPH	
GAINPH?	freq,mag1,mag2,db,phase,gain
GAINPH,SWEEP?	n lines of GAINPH? data
HOLD,on/off	
INPUT,type,impedance	
KEYBOA,value	
LCR,conditions,param,head	
LCR?	freq, resistance, reactance, impedance, phase
LCR,SWEEP?	n lines of data:

SFRA45 communications manual

MARKER, on/off, frequency	
MODE, type	
OUTPUT, on/off	
PHCONV, convention	
PROGRAM, function, number	
PROGRAM?	CR terminated text string
RANGE, ch, ranging, range	
RESOLU. format	
RESULT, function, number	
REZERO	
SCALE, channel, factor	
SCALE, channel?	single real data value
SCREEN?	Multiple data bit values
SPEED, speed	
START	
STATUS, channel?	range number, range text, over/low/ok
STOP	
TCOMM, comments	
TCOMM?	Comments
TCON, conterminal	
TCOM?	Connected Terminals
TFA	
TFA?	freq, gain, phase, dB, mag1, mag2
TFA, SWEEP?	n lines of TFA? Data
TFLUID, yes/no	
TID, identifier	
TID?	Identifier
TMANU, manufacturer	
TMANU?	Manufacturer
TOLTC, oltc	
TREF, refterm	
TREF?	Reference Terminal
TRES, resterm	
TRES?	Response Terminal
TSER, serial No	
TSER?	Serial Number
TTEMP, temperature	
TTEMP?	Temperature
TUNSHL, length	
USER?	3 CR terminated text strings
VERSION?	datecode, type, cpu, dsp, fpga, boot

SFRA45 communications manual

WAVEFO,type
ZERO
ZERO,DELETE

SFRA45 communications manual

calibration commands

CALAPP	
CALCOM,freq	
CALDCO,value	
CALFIL,index,value	
CALFIL?	six real data values
CALFRQ,index,freq	
CALFRQ?	seven real data values
CALHF,index,value	
CALIBR,index,value	
CALIBR?	single integer data value
CALIDS,string	
CALIDS?	string
CALOUT,index,value	
CALPHA,index	
CALRES	
CALSAV,password	
CALSNO,serial number	
CALSTR,string	
CALSTR?	string

SFRA45 communications manual

Appendix B – Configurable parameters

All parameters can be accessed using the CONFIG command:

CONFIG,*parameter,data*

Number Function

System parameters

- | | |
|---|--|
| 1 | Operating mode, (Sets main mode)
0=AC RMS Voltmeter
1=Impedance Meter
2=Oscilloscope
4=Frequency Response Analyser |
| 2 | Interface, (Remote settings)
0=RS232
1=USB
2=LAN |
| 3 | Bandwidth auto or wide, (Acquisition Settings)
0=Wide
1=Low
2=Auto |
| 6 | Phase convention, (System Options)
0=-180° to +180°
1=0° to -360°
2=0° to +360° |
| 7 | Output , (Generator settings)
0=Off
1=On |
| 8 | Step message, (System Options)
0=Disabled
1=Enabled |
| 9 | Keyboard beep on/off, (System Options)
0=Enabled
1=Disabled |

SFRA45 communications manual

- 12 **User Window**, (FRA/LCR Measurement Settings – enter figure in sec)
- 13 **Speed**, (FRA/LCR Measurement Settings)
 0=Very Slow
 1=Slow
 2=Medium
 3=Fast
 4=Very Fast
 5=Window
- 14 **Filter**, (FRA/LCR Measurement Settings)
 0=Normal
 1=Slow
 2=None
 3=None + fast response
- 16 **Baud rate**, (Remote Settings “RS232”)
 0=38400
 1=19200
 2=9600
 3=1200
- 18 **Sweep steps**, (Sweep Settings Enter step number figures)
- 19 **Sweep start frequency**, (Sweep Settings-Enter figures)
- 20 **Sweep stop frequency**, (Sweep Settings-Enter figures)
- 21 **Sweep type**, (Sweep Settings)
 0=Single
 1=Continuous
- 22 **Resolution**, (Remote Settings)
 0=Normal
 1=High
- 28 **CH1 input ranging**, (Input Settings)
 0=Full Autorange
 1=Range Up Only
 2=Manual

SFRA45 communications manual

- 29 CH2 input ranging, (Input Settings FRA Only)
0=Full Autorange
1=Range Up Only
2=Manual
- 32 CH1 scale factor, (Input Settings-Enter figures)
- 33 CH2 scale factor, (Input Settings-Enter figures)
- 39 Brightness, (System Options)
0=Low
1=High
- 40 Display, (System Options)
0=Colour
1=White on black
2=Black on white
- 42 Enlarge results, (System Options)
0=Off
1=On
- 47 Display type, (Sweep Settings)
0=Real time
1=Table
2=Graph
- 48 Generator frequency, (Generator Settings-Enter figures)
- 49 Low output amplitude V, (Generator Settings-Low output-Enter figures)
- 51 Generator waveform, (Generator Settings)
0=Sinewave
1=Square wave
2=Triangle
3=Ramp
4=Noise

SFRA45 communications manual

- 52 Frequency step, (Generator Settings-Enter figures)
- 53 Amplitude Step, (Generator Settings-Enter figures)
- 54 Low output amplitude dBm, (Generator Settings-Enter dBm figures)
- 55 Amplitude step, (Generator Settings-Enter dB figures)
- 56 Amplitude control, (Generator Settings)
 0=Volts
 1=dBm
- 60 Sweep type, (Sweep Settings +Step Type)
 0=Logarithmic
 1=Linear
- 61 Gain Graph scaling, (Sweep Settings)
 0=Auto
 1=Manual
- 62 Gain Graph max, (Sweep settings-Enter figures)
- 63 Gain Graph min, (Sweep settings-Enter figures)
- 64 Frequency marker, (Sweep Settings)
 0=Off
 1=Single
 2=Dual
- 65 Marker frequency 1, (Sweep Settings-Marker on-Enter figures)
- 66 Search for peak, (Sweep Settings)
 0=Disable
 1=Single
 2=Dual
- 67 N4L Clamps, (Ch1/Ch2 Inputs)
 0=No
 1=Yes
- 68 Marker frequency 2, (Sweep Settings-Marker on-Enter figures)

SFRA45 communications manual

- 75 Graph, (FRA Settings)
 0=Dual
 1=Gain
 2=Phase
- 76 Computation, (FRA Settings)
 0=CH2/CH1
 1=CH1/CH2
- 88 Timebase, (Oscilloscope Settings-Enter figures)
- 89 Trigger level, (Oscilloscope Settings-Enter figures)
- 90 Pretrigger, (Oscilloscope Settings)
 0=None
 1=25%
 2=50%
 3=75%
- 91 Trigger polarity, (Oscilloscope Settings)
 0=Rising edge
 1=Falling edge
- 92 Trigger mode, (Oscilloscope Settings)
 0=Auto
 1=Normal
 2=Single shot
- 94 Traces, (Oscilloscope Settings)
 0=Single
 1=Dual
 2=CH2 Current
- 95 Trigger channel, (Oscilloscope Settings)
 0=CH1
 1=CH2
- 104 Measurement, (LCR Settings)
 0=Impedance magnitude
 1=Parallel circuit
 2=series circuit
- 110 Search for peak, (Sweep Settings, LCR Mode)

SFRA45 communications manual

0=Off
1=Single
2=Dual

- 112 Initial settings, (System settings)
0=Program 1
1=Factory default
2=As last used
- 113 Peak hold, (Sweep Settings)
0=Off
1=On
- 117 IP Address, (Remote settings-LAN-Entee address numbers)
- 121 Language, (System Settings)
0=English
1=Italian
- 161 AC Trim Enable, (Trim Settings)
0=Disabled
1=Ch1
2=Ch2
- 162 AC Trim Level (Trim Settings-Enter numbers)
- 163 AC Trim Tolerance (Trim Settings-Enter numbers)
- 164 Transformer Unshielded Length, (DUT-Enter figures)
- 165 Transformer Temperature, (DUT-Enter figures)
- 166 Transformer Fluid Filled, (DUT Settings)
0=Yes
1=No
- 169 Transformer OLTC, (DUT-Enter figures)
- 170 DUT Mode, (DUT Settings)
0=None
1=Power Transformers
- 171 Phase Graph scaling, (Sweep Settings)
0=Auto

SFRA45 communications manual

1=Manual

- 172 Phase Graph max, (Sweep settings-Enter figures)
- 173 Phase Graph min, (Sweep settings-Enter figures)
- 174 Zero Offset
- 177 Memory, (Program)
 - 0=Internal
 - 1=USB Memory stick
- 178 Data, (Program)
 - 0=Program
 - 1=Results
- 179 Action, (Program)
 - 0=Recall
 - 1=Store
 - 2=Delete
- 180 Location, (Program - Enter figures as required)
- 185 Set clock hours, (System – Enter figures as required)
- 186 Set clock minutes, (System – Enter figures as required)
- 187 Set clock Seconds, (System – Enter figures as required)
- 188 Set date day, (System – Enter figures as required)
- 189 Set date month, (System – Enter figures as required)
- 190 Set date year, (System – Enter figures as required)

Newtonson4th Ltd. contact details

Please direct all queries or comments regarding the SFRA45 instruments or this manual to:

Newtonson4th Ltd.
30 Loughborough Rd.
Mountsorrel
LOUGHBOROUGH
LE12 7AT
United Kingdom

Tel: (0116) 230 1066 international +44 116 230 1066
Fax: (0116) 230 1061 international +44 116 230 1061

E-mail address: sales@newtonson4th.com
office@newtonson4th.com

web site: www.newtonson4th.com

At Newtonson4th Ltd. we have a policy of continuous product improvement and are always keen to hear comments, whether favourable or unfavourable, from users of our products. Please telephone, fax, write or e-mail with your comments.